



MQTT Topic Client Component

Using :

Subscribe Topic To MQTT Broker
Show Published Topic From MQTT Broker

Events :

OnPublishTopic if MQTT Boker Publish Topic To MQTT Client

Commands :

Start Connect MQTT Client To MQTT Broker And Subscribe Topic
Stop Disconnect MQTT Client

Propertyes :

AotoStart After Run call **Start** Command
ClientID MQTT Clint Id
DevicePort MQTT Broker Port
IOInfo Send Information to Alarm Info
ReconnectTimeOut Reconnect Timeout ms.
TimeOut Connect Timeout ms.
UserName MQTT User Name
UserPassword MQTT User Password
Autoping Set Autoping

In MQTT, the client sends PINGREQ messages at regular intervals.
The server replies with PINGRESP to confirm the connection.
If the server does not receive PINGREQ in time, it disconnects the client.

